




## Installation

ENAiKOON locate-04 to the power supply

## Straightforward installation

Just connect ENAiKOON locate-04 to the power supply (VCC) and the Digital Input 4 to ignition, attach the GSM/GPS antenna to the related connectors and mount the antenna. That's all.

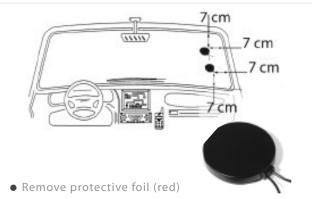

- Stick it to the windscreen from inside the vehicle
- Do not bend or fold up the antenna cable

Please ensure that there is no material between the ENAiKOON locate-04 antenna and the sky that may interfere with the radio transmission, such as metal, water, metal oxide windscreens, or plastic with a metal varnish.

Keep a minimum distance of 1 metre (1 yd) from other antennas mounted to the vehicle (i.e. radio antenna, toll

collect antenna, car phone antenna etc.)

A minimum distance of 7 cm (2.8 in) must be kept from the front shield frame.

WARNING: Problems may arise in vehicles with heated or metal oxide windscreens.

#### Digital Output 1, blue

#### Digital Input 2, yellow

# Digital Input 4, green (Ignition - terminal 15):

Please <u>do not</u> connect it to the car radio or to the terminal 15r or terminal 30z or to the cable with tension of the ignition





Please connect to a cable with direct connection to the positive pole of the battery or to a VCC supply. It is important to ensure that no power supply is selected, where there is the possibility that the vehicle can cut off the electricity supply to the ENAIKOON tracking device, using a so called consumer shutdown. Your service station can help you set this up correctly.

### Battery negative pole, black (terminal 31):

Please connect directly to the car body, <u>not</u> to the battery negative pole

We strongly disadvise using cable binders or strip connectors. Please use a soldering pen to connect the cables, and check continuity afterwards.



ENAiKOON GmbH Scheelestr. 1a 59929 Brilon Germany Tel.: +49 30 397475-30 Fax: +49 30 397475-40 info@enaikoon.com www.enaikoon.com

Service hotline: Mon. - Fri., 9:00 - 13:00 and 14:00 - 17:00 CET