




## Installation

ENAIKOON locate-06  
with ENAIKOON driver-id

### Straightforward installation

Just connect the ENAIKOON locate-06 red cable to VCC, black cable to ground and the Digital Input 4 to Ignition, attach the GSM/GPS antenna to the related connectors and mount the antenna, pass the 1-Wire cable of ENAIKOON driver-id reader and fix the reader. That's all.

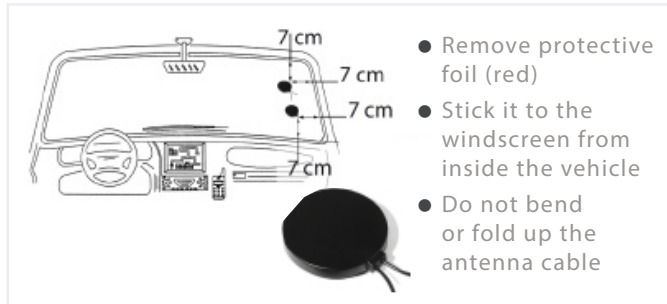


We strongly dis advise using cable binders or strip connectors. Please use a soldering pen to connect the cables, and check continuity afterwards.

Please ensure that there is no material between the ENAIKOON locate-06 antenna and the sky that may interfere with the radio transmission, such as metal, water, metal oxide windcreens, or plastic with a metal varnish.

Keep a minimum distance of 1 metre (1 yd) from other antennas mounted to the vehicle (i.e. radio antenna, toll collect antenna, car phone antenna etc.)

A minimum distance of 7 cm (2.8 in) must be kept from the front shield frame.

**WARNING:** Problems may arise in vehicles with heated or metal oxide windcreens.

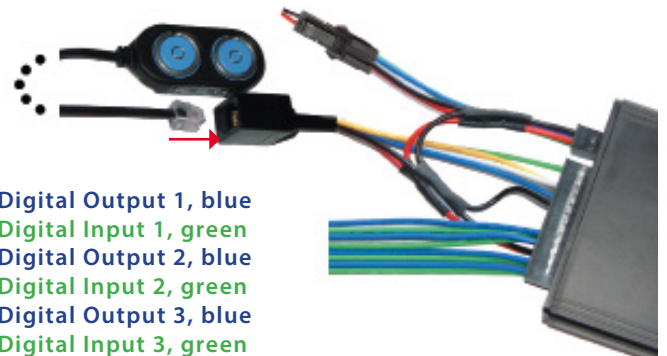

**Digital Output 1, blue**  
**Digital Input 1, green**  
**Digital Output 2, blue**  
**Digital Input 2, green**  
**Digital Output 3, blue**  
**Digital Input 3, green**  
**Digital Output 4, blue**  
**Digital Input 4, green (Ignition - terminal 15):**

Please do not connect it to the car radio or to the terminal 15r or terminal 30z or to the cable with tension of the ignition switch 1, connect it directly to the terminal 15 and to the cable with tension of the ignition switch 2

**Ground, black (terminal 31):** Connect directly to the car body, not to the battery negative pole

**Battery positive pole, red (terminal 30) 6-31 V:**

Connect to a cable with direct connection to the positive pole of the battery or to a VCC supply.

It is important to ensure that no power supply is selected, where there is the possibility that the vehicle can cut off the electricity supply to the ENAIKOON tracking device, using a so called consumer shutdown. Your service station can help you set this up correctly.

## ENAIKOON

ENAIKOON GmbH  
Stendaler Str. 26  
12627 Berlin  
Germany

Tel.: +49 30 397475-30  
Fax: +49 30 397475-40  
[info@enaikoon.com](mailto:info@enaikoon.com)  
[www.enaikoon.com](http://www.enaikoon.com)

Service hotline:

Mon. - Fri., 9:00 - 13:00  
and 14:00 - 17:00 CET