



## Installation

ENAIKOON locate-06 with ENAIKOON driver-id and ENAIKOON buzzer

### Straightforward installation

- Just connect the ENAIKOON locate-06 to VCC and ground (car body), and the Digital Input 4 to ignition,
- attach the GSM/GPS antenna to the related connectors and mount the antenna,
- pass the 1-Wire cable of ENAIKOON driver-id reader and affix it,
- pass the black cable of the ENAIKOON buzzer to Digital Output 2 and the red cable to VCC.

That's all.



Digital Output 1, blue  
Digital Input 1, green  
Digital Output 2, blue  
Digital Input 2, green  
Digital Output 3, blue  
Digital Input 3, green  
Digital Output 4, blue  
Digital Input 4, green (Ignition - terminal 15):

Please do not connect it to the car radio or to the terminal 15r or terminal 30z or to the cable with tension of the ignition switch 1, connect it directly to the terminal 15 and to the cable with tension of the ignition switch 2

**Ground (black, terminal 31):** Please connect directly to the car body, not to the battery negative pole

**Battery positive pole 6 - 31 V (red, terminal 30):**

Please connect to a cable with direct connection to the positive pole of the battery or to a VCC supply.

It is important to ensure that no power supply is selected, where there is the possibility that the vehicle can cut off the electricity supply to the ENAIKOON tracking device, using a so called consumer shutdown. Your service station can help you set this up correctly.

Digital Output 2, blue  
**Battery positive pole 6 - 32 V (terminal 30, red)**



ENAIKOON  
buzzer

We strongly disadvice using cable binders or strip connectors. Please use a soldering pen to connect the cables, and check continuity afterwards.


## ENAIKOON

ENAIKOON GmbH  
Scheelestr. 1a  
59929 Brilon  
Germany

Service hotline:

Tel.: +49 30 397475-30  
Fax: +49 30 397475-40  
[info@enaikoon.com](mailto:info@enaikoon.com)  
[www.enaikoon.com](http://www.enaikoon.com)

Mon. - Fri., 9:00 - 13:00  
and 14:00 - 17:00 CET

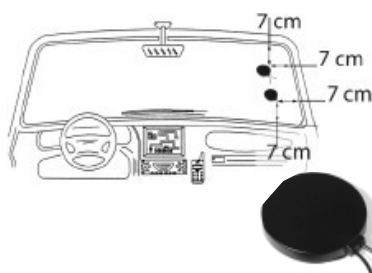

- Remove protective foil (red)
- Stick it to the windscreen from inside the vehicle
- Do not bend or fold up the antenna cable

Please ensure, that there is no material between the ENAIKOON locate-06 antenna and the sky that might interfere with the radio transmission, especially metal, water, metallic evaporated windcreens or metallic varnished plastic parts.

Please ensure a minimum distance of 1 meter (1 yd) to other antennas mounted to the vehicle (radio antenna, toll collect antenna, car phone antenna etc.), as well as a minimum distance of 7 cm (2.8 in) to the frame of the front shield. There may be problems with the GPS receiver in vehicles with heated or metallic evaporated windcreens.

